



How to replace an Avonride coupling lock

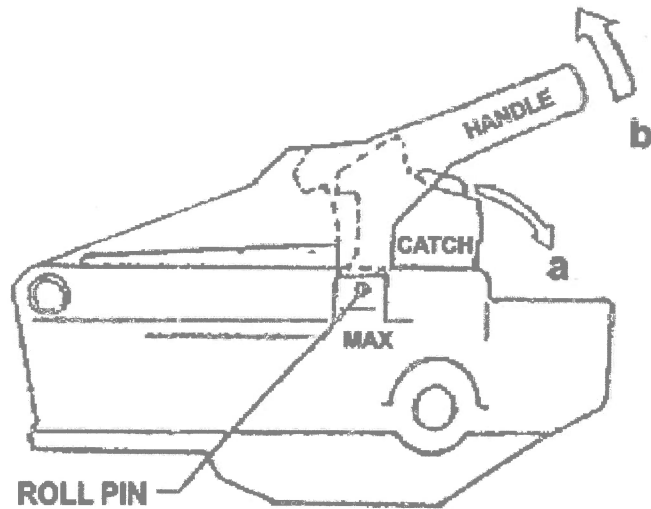

- 1) Move the catch in direction of arrow 'a' and handle in direction of arrow 'b' until roll pin is exposed.
- 2) Using a suitable drift remove roll pin. Do not drill.
- 3) The original catch can now be removed. Retain spring for use with the lock. Discard the 2 washers and the plastic blank

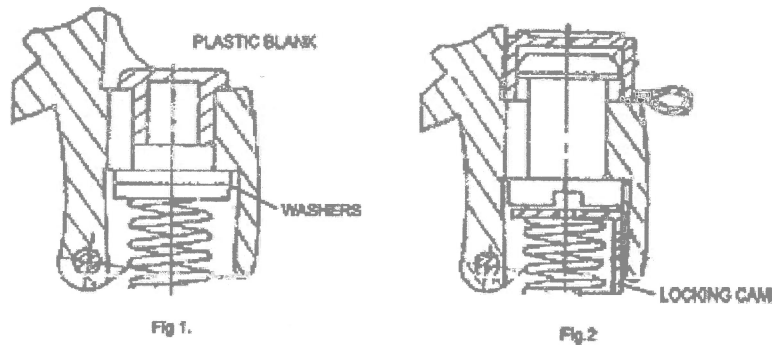

- 4) Locate lock into catch, secure with special nut. Position locking cam by tightening screw position – shown in fig.2. Replace spring into catch under locking cam (see fig.2) and place assembly in position on coupling body.
 - 5) Line up catch holes and insert new roll pin.
- Check all parts are secure and test locking mechanism operates freely